Loading EtherLynx, IdentiLynx & VeriLynx Cameras Troubleshooting Guide

Setting Up Your System

Note: Contact technical support with any questions you may have: support@finishlynx.com

Computer Setup and Networking Best Practices	FinishLynx Settings Best Practice	
 Make sure you have the correct IP address. a. Set a static IP (recommended = 192.168.0.5). Install Windows Updates. a. Pending Windows updates may restrict network communications on your PC. Install thenthem and reboot your PC. 	 Download and install the latest version of FinishLynx (<u>www.finishlynx.com</u>) Go to Help About to check the current version. <u>About FinishLynx</u> Version: 11.22b04-e Released: Apr 8 2021 	
 3. Disable Wireless. a. Open Network and Sharing Center and select Change Adapter Settings. b. Right-click Wireless Network and click Disable. Wi-Fi Not connected Intel(R) Dual Band Connect / Disconnect 4. Disable Firewalls. 	 Run as Administrator by default: a. Right-click the FinishLynx shortcut. b. Select Properties. c. Select the Compatibility tab. d. Check the Run as Administrator box. 	
 a. In the Control Panel select Windows Defender Firewall. b. Click Turn Windows Defender Firewall on or off. c. Turn off the firewall for each network type. Public network settings Image: State of the firewall for each network type. Sum of Windows Defender Firewall blocks a new app Image: Transition of Windows Defender Firewall blocks a new app Image: Transition of Windows Defender Firewall blocks a new app Image: Transition of Windows Defender Firewall (not recommended) 5. Disable Network Card Power Management. 	 3. Check the Hardware Type: a. Go to File Options b. Find the Hardware Type: setting. c. Select Detect. 	
 a. Open the Device Manager. b. Find your Ethernet Adapter. c. Right-click and select Properties. d. Select the Power Management tab. e. Un-check the box that says "Allow the computer to turn off this device to save power". Realtek PCIe GBE Family Controller Properties Realtek PCIe GBE Family Controller Properties Realtek PCIe GBE Family Controller Power Management Reatek PCIe GBE Family Controller Power Management Allow the computer to turn off this device to save power Allow the computer to turn off this device to save power Only allow a magic packet to wake the computer	 4. Set the Camera Network: a. Start FinishLynx. b. Go to File Options c. Find the Camera Network: setting. d. Select the IP address assigned to the network interface card connected to the camera(s). e. Restart FinishLynx. Hardware Type:* ONONE OSCSI Camera Network:* 192.168.0.5 Camer	

Troubleshooting Your Cameras

Camera is still not connecting to FinishLynx

If you have followed the above steps but your camera is not connecting to FinishLynx, you can follow these next steps.

- Make sure all connections are secure and your equipment is in good working condition. Double-check the Ethernet cables.
 - 1. Switch out the Ethernet cables (these cables can go bad, especially when used often).
 - 2. Switch the PoE injector and/or port on the PoE switch.
 - 3. Restart your computer and install any pending Windows updates.
 - 4. Check for IP address conflicts. FinishLynx will assign cameras an IP address, incrementing by 1 starting with its own address, for each camera. Make sure no other devices on your network are assigned these addresses.
 - a. Example: if computer IP address is 192.168.0.5 -> Camera 1 will be 192.168.0.6.

POWER & STATUS LEDs

Check **POWER & STATUS** LEDs on Vision or Vision PRO camera back.

a. **ON** – **RED** = camera powered OFF

– Press the ⁽¹⁾ icon to turn on (solid GREEN).

- b. **BOOT** Slow/fast blink AMBER = Waiting for/loading in FinishLynx.
 - Solid RED = Contact tech support.

Common Error Codes and Solutions

Error 129 Failed Contact Address	Disable Wireless (See Step 2 under Computer Setup and Networking above) Make sure you are running the correct version of FinishLynx. To see what version you have, Open FinishLynx then click Help About Download the latest version of FinishLynx on our website: www.finishlynx.com/product/software/finishlynx-results-software/	Wireless Network Connection Not connected Intel(R) Dual Band Wireless-A Bridge Connect / Disconnect Status Bridge Connections Create Shortcut Delete Rename Properties
Error 201 Invalid Version	Make sure you are running the correct version of FinishLynx. To see what version you have, Open FinishLynx then click Help About Download the latest version of FinishLynx on our website: www.finishlynx.com/product/software/finishlynx-results-software/	About FinishLynx 🛛 🔀 Version: 10.01 Released: Nov 23 2016 Image memory: 8000000 bytes
Error 202 Bad Set IP Address	Check and make sure the IP address is correct. Right-click the FinishLynx icon, then select Run as Administrator .	