



Lynx 360 Display

Quick Start Guide

Items Not Included

Computer running FinishLynx (requires NCP plug-in) or FieldLynx (requires Scoreboard plug-in) on Microsoft Windows. ResultTV is also required.

Introduction

The following guide will walk you through the setup, configuration, and operations of the display. If at any point you need additional help, please contact Technical Support: support@finishlynx.com.

Setup

Follow the steps defined in the following documents available on the USB drive provided with your order or online:

1. [Lynx 360 Display – Basic Setup Video](#)
2. [360_LED_Display_Electrical_QSG](#) (see Download section)

ResultTV

1. Go to **File | Options... | General tab**:
 - a. Profile:
 - **Video-360 (single)** for the 1-tier build
 - **Video-360 (double)** for the 2-tier build
 - b. Click **Ok**.
 - c. Exit and restart ResultTV.

FieldLynx

1. Click the **Options** gear button.
2. Click **New** to create a new scoreboard object or select an existing scoreboard object to edit it.
3. **Result Scripts**
 - Metric: ResultTV_Video_results-360.lss
 - English: ResultTV_Video_results-360.lss
 - Standings: ResultTV_Video_standings-360.lss
4. Serial: **network (connect)**
 - Port number: **1024**
 - IP Address: (IP address of the ResultTV PC)
5. After entering these settings, restart the software to confirm that the scoreboard script is running.

FinishLynx

1. Go to **Scoreboard | Options...**
2. Click **New**.
3. Serial Port: **Network(connect)**
 - a. Port: **1024**
 - b. IP address: address of the ResultTV PC.
4. Script: **ResultTV_Video_1line-360.lss**
5. Running Time: **Normal**
6. Results: **Auto**
7. Click **Ok** and restart FinishLynx.