




FinishLynx Grand Prix Package Quick Start Guide

For EtherLynx Vision Cameras

Athletics – Grand Prix

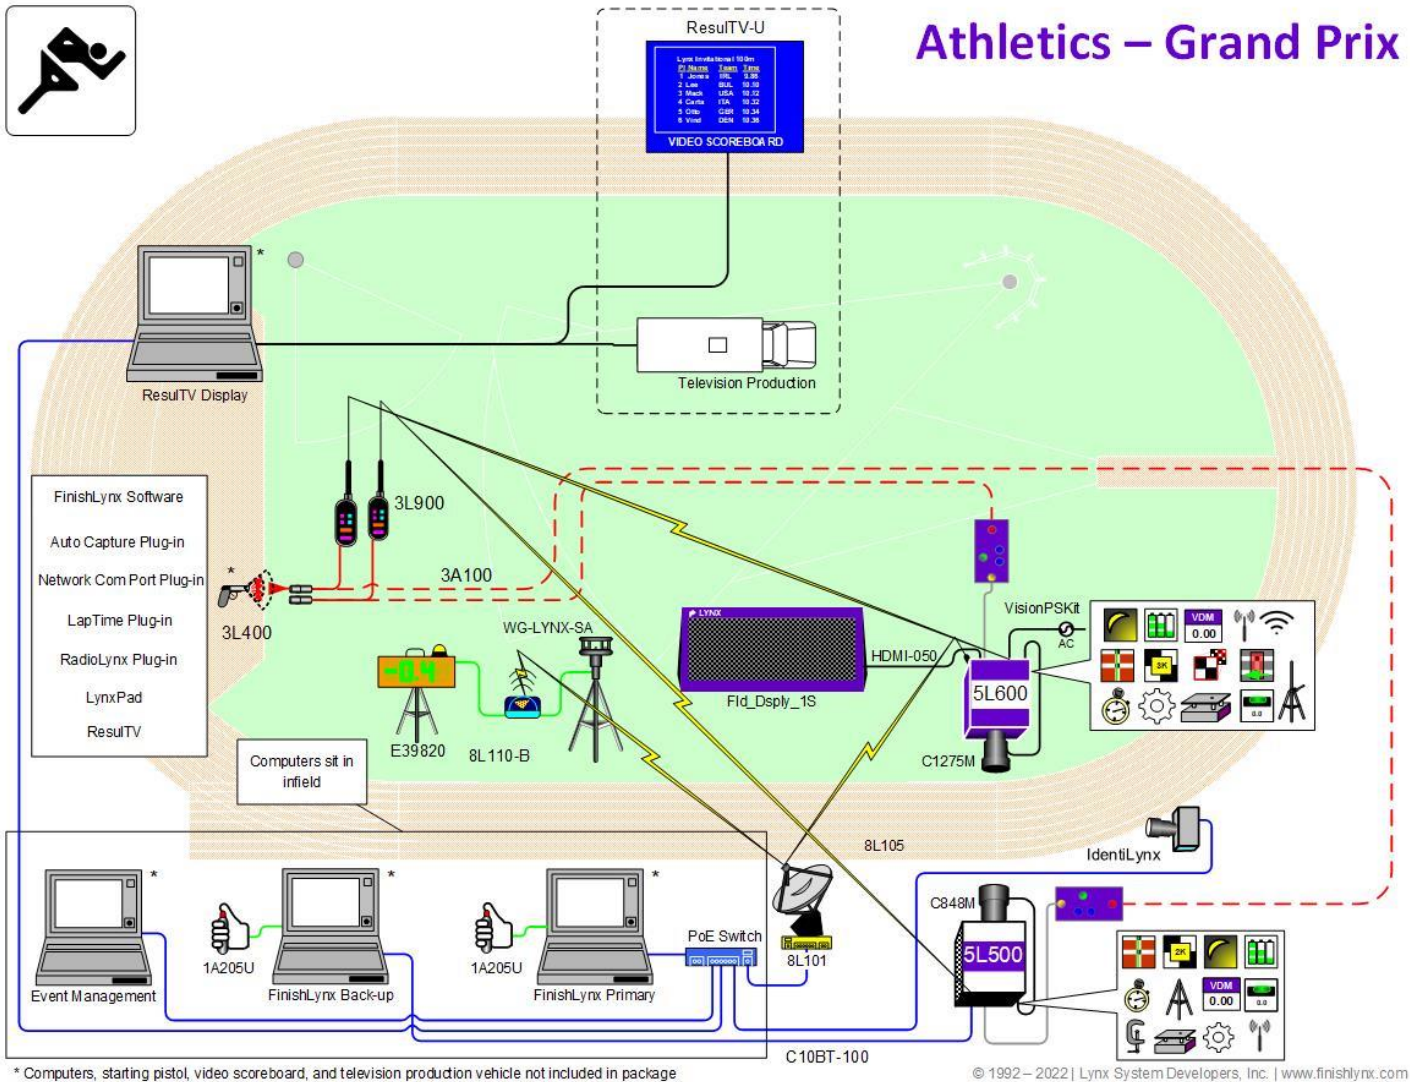

Download a copy:



Contact Technical Support:

Email: support@finishlynx.com

Phone: 978-556-978

Join Us Online:

Timer's Group: facebook.com/groups/finishlynx











Facebook: facebook.com/finishlynx




Instagram: [@finishlynx](https://instagram.com/finishlynx)





Please verify that your FinishLynx Grand Prix System contains all the components pictured here. If you have questions about setting up your system after following this quick start guide, call: 1-800-989-LYNX or email: support@finishlynx.com

For additional tech support documents and downloads, visit www.finishlynx.com/support/

Be sure to keep your USB flash drive safe. It includes your Serial Numbers, Software, & Quick-Start Guides. To access the files, insert the flash drive in your computer and click on [START.html](#)

Item	Description	Part #	Item	Description	Part #
	Lynx USB Flash Drive with FinishLynx, Plugins, ResulTV & LynxPad	5LSW,5LPRL, 5LACM, 5LPNCP, 5LLAP, ResulTV-U and 9LSW01		Super head clamp	BG2909
	Carrying Case (x2)	1A207		Camera tripod	BG3036
	EtherLynx Vision PRO high sensitivity camera	5L600		Heavy Duty, Crank-Up Tripod with wheels.	B200
	C-Mount 12.5-75mm f1.2 Motorized Zoom Lens	C1275M		Connection box	C-Box
Not Pictured	AirLynx Gateway and bridge	Ext_Wifi		Connection box cable	451
Not pictured	AC/DC and DC in Power Supply Kit	VisionPS Kit		Normally closed start sensor with light (x2)	3L400
	EtherLynx Vision high sensitivity camera	5L500		500 ft. start sensor cable (x2)	3A100
	C-Mount 8-48mm f1.2 Motorized Zoom Lens	C848M		Capture button and USB/Serial adapter (x2)	1A205U
	CS Mount 2.8-10mm P-Iris lens	CS2810P		Button splitter	B-SPL
	CS Mount to C Mount Adapter	MCS-C		25 ft. Ethernet cable (x4)	C10BT-25
Not pictured	Timer-Enabled option for Vision cameras (x2)	5LTE		100 ft. Ethernet cable	C10BT-100
Not pictured	High Resolution option for 5L600 & 5L500 camera (x2)	5LZoom 5LHR		IdentiLynx Full Frame Video Camera kit	SR -IdentiLynx
Not pictured	LuxBoost Level 4 (x2)	5LLUX4		Sonic Wind Gauge with Tripod, 50m cable and controller	WG-Lynx-SA

Not Pictured	Video Display Module (X2)	5LVDM
Not pictured	Internal battery (x2), electronic filter and Level (x2)	5LBatt, 5LEF, 5LLEVEL
	Internal RadioLynx (x2)	Int-3L900
	Remote positioner (x2)	2L102
	Geared head (x2)	BG3275

	SerialLynx with Battery Pack	8L110-B
	4-digit Wind display & countdown timer	E39820
Not Pictured	HDMI Interface cable 50 feet	HDMI-050
	Infield Display (1-sided)	Fld_Dsply_1
	8-port 10/100 PoE Switch	PoE-Switch

Items Not Included

- **Laptop or netbook** computer running Microsoft Windows. Your computer needs: 1 available serial port (or USB port with serial adapter) and 1 available Ethernet port. A **printer** is also optional.


Introduction

In this QSG, you will learn how to configure the FinishLynx network, set up primary/backup EtherLynx Vision cameras and align them with the finish line using the remote-control features. You will also learn how to capture, evaluate, and print a FinishLynx results image, configure FinishLynx to work with the scoreboard, and import a start list created in LynxPad.

Step 1: Go to the Track

Bring your FinishLynx system (and an assistant) to the track. Make sure there is **power** available for your computers and for the Power over Ethernet switch. The EtherLynx Vision camera and the IdentiLynx camera will receive their power via the Ethernet data cables.

Set up a table near the finish line, ideally on the infield if power is available. The finish line should have black lane markers painted or taped on the finish. If not, we suggest you use black matte tape to designate lane lines. This will help you align the camera and get clearer images.

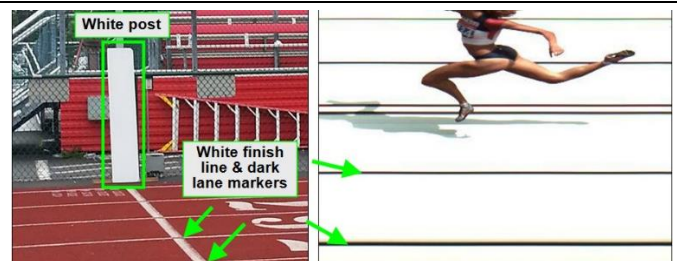

Step 2: Install the Software

A. FinishLynx Software & Plug-ins

Insert the Lynx USB flash drive in your computer and click **START.html** to access the software installers and serial numbers. You can also download the latest version of FinishLynx on our website:

www.finishlynx.com/product/software/finishlynx-results-software/

Install FinishLynx, RadioLynx, ACM, NCP, and LapTime plug-ins from the flash drive. When prompted, enter the serial numbers found inside the flash drive.

B. LynxPad & ResultTV

Install using the Lynx USB Flash Drive or download the latest version of LynxPad at:

www.finishlynx.com/product/event-management/lynxpad/
www.finishlynx.com/product/software/resultv-display-software/

Follow the instructions on your screen to install LynxPad and ResultTV. When prompted, enter the serial number found on the flash drive.

Note: **Right-Click** on the installer and select **Run as Administrator** to install LynxPad; if you do not, you will not be able to print from LynxPad.

Step 3: Evaluate a Sample Image

1. Start FinishLynx. Click **File | Open...**
2. Double-click **Sprint.evn** to open the sample event.
3. Click the mouse once on the torso of a competitor on the left side of the screen. A red hairline appears. Enter the lane number for the athlete in the identification box.
4. Press the **Enter** key on your computer. The finisher's time appears in the start list above the image.
5. Repeat these steps for all competitors on the screen. You have just successfully evaluated a race in FinishLynx.
6. Click **File | Close window**. If you want to reuse the image later for practice evaluation, click **No** when asked to save your changes. Close FinishLynx.

Step 4: Configure the Network (Windows 10/11)


1. Go to the Windows **Control Panel**. On the top right is **View By** with a drop-down arrow. Click the drop-down arrow and choose Small or Large Icons.
2. Double-click on **Network and Sharing Center**. They are listed alphabetically by icon name.
3. This will open the **Network and Sharing Center**. On the left is a blue section titled Control Panel Home.
4. Click the **Change Adapter Settings** icon.
5. A new window will open displaying your network connections. Right-click on the **Wireless Network Connection** and select **Disable** from the list. This is only necessary for the FinishLynx Capture computer.
6. Right-click the **Local Area Connection** and select **Properties** from the list of items. A window will appear with a list of connection items. Select **Internet Protocol Version 4 (TCP/IPv4)** and click the **Properties** button.
7. A Properties window will appear and is typically set to **Obtain an IP address automatically**. Select the radio button for **Use the following IP address**. In the box for IP address, enter 192.168.0.5 for FinishLynx and hit **Tab** key to auto fill in Subnet mask 255.255.255.0
8. Click OK and navigate back to the Control Panel. In the control panel click the Windows Firewall icon. Under Control Panel Home, on the left, click **Turn Windows Firewall on or off**.
9. Turn off both Private and Public Firewalls (Domain for Windows Pro).

Step 5: Set Up the Primary Camera and Tripod

Set up the tripod in line with the finish line, preferably on the infield and approximately **10 feet back**.

Note: Minimum recommended camera distance from track is 8 feet (at this distance you may not be able to see the feet of the athlete in Lane 1 – being able to see the feet is not a requirement for accurate timing on the Torso of the athlete). If you need to be closer than this, you may have to use the optional 2.8-10mm lens supplied with your package.

1. Extend the tripod legs so the geared head is approximately 7 ft high.
2. On the near side of the finish line, hold a plumb bob so that it is suspended directly above the middle of the finish line. This is the **plumb line**, shown as **a** in the image below.
3. Tie string to the screw on the top of the tripod head. Have your assistant take the other end of the string to the far side of the finish line and hold the string taut. This is the **sight line**, shown as **b** in the image below.
4. Move the tripod to the left or right until the plumb line and sight line touch at position **C** in the image below. The tripod is now in the plane of the finish line.

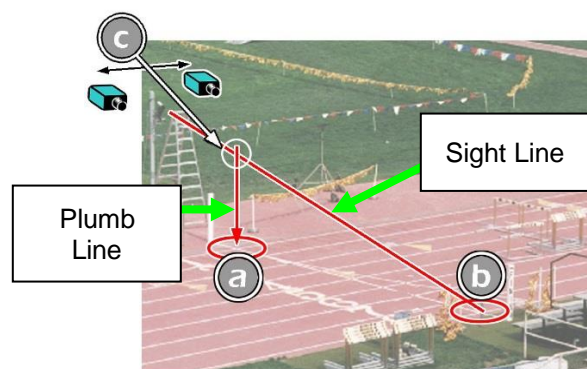

Step 6: Attach the Camera to the Tripod


1. Secure the remote positioner to the camera bottom by turning the black handled thumbscrew. Make sure the FinishLynx label faces in the same direction that the camera lens will face.
2. Connect the cable that comes with the remote positioner to a port on the positioner and the port on the back of the camera labeled **Remote**.
3. Connect the cable on the remote lens to the remaining serial port on the remote positioner.
4. Secure the geared head to the top of the tripod.



Note: Cables omitted for clarity and actual lens may vary from model shown

5. Note how the mounting plate is attached to the top of the geared head. Then, pull back on the lever at the top of the geared head to release the mounting plate.
6. Tighten the mounting plate to the bottom of the remote positioner by turning the screw with a flathead screwdriver. Make sure the **Lens** marking on the bottom of the plate is facing the front of the remote positioner (where the Lynx label is affixed).
7. Attach the camera with the remote positioner and mounting plate to the tripod by clicking the mounting plate into place on the geared head.
8. With the camera lens lined up with and facing the finish line, make minor adjustments to the tripod legs so both bubbles on the tripod are centered.
9. Turn the black knob on the geared head that controls the **tilt** of the camera so that it is at about a 30-degree angle to the ground.

Step 7: Connect the Cables

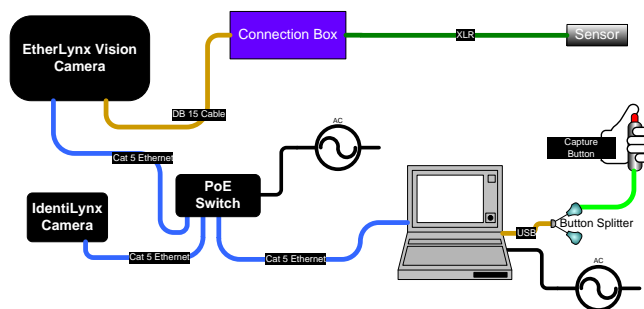

1. Connect the female end of connection box cable to the port on the back of the camera labeled **Connection Box** and the male end to the left side of the connection box.
2. Connect an Ethernet cable between the back of the camera labeled **POE 10/100/1000** and a port on the Power over Ethernet switch.
3. Connect an Ethernet cable to the network connection on your computer and the other end to a port on the Power-over-Ethernet switch.
4. Connect the male end of the start sensor cable to the connection box where it says **Start**. Attach the start

sensor to the other end of the cable and keep the start sensor close by.

5. Connect the button splitter to a 9-pin serial port, or a USB port with the supplied adaptor, on your computer.
6. Connect the capture button cable to the 9-pin serial port on the button splitter labeled **Capture Button**.
7. Depending on the distance between the scoreboard and your computer or camera, connect the scoreboard serial cable, either to the **Serial Port** on your Connection box, or to the other 9-pin serial port on the button splitter.
8. Turn on the camera by pressing and holding the power button on the back plate.




Step 8: Align the Primary Camera


Note: The EtherLynx Vision camera can be aligned using either 1-D mode or 2-D EasyAlign mode. We recommend using EasyAlign. If you are using an older model EtherLynx camera, however, it must be aligned using classic 1-D mode.

NOTE: If running a wireless Ethernet card on your computer, we recommend that you disable it while the camera is booting.


Start FinishLynx. Wait while the green status bar in the lower right corner of the screen completes its cycle.

Align Vision Camera in EasyAlign 2-D Video Mode


1. **Activate EasyAlign** by clicking on the 2D align Icon  in the top left-hand corner of the FinishLynx **Hardware Control** screen.

The icon turns green,  and the 2-D video viewer appears within the software. The 2-D viewer makes it easy to see how your camera is aligned on the finish. **The goal is to align the green vertical line on the painted finish line and near its front edge.**

2. **Adjust Remote Lens/Positioner Controls** – Adjust the remote lens/position controls on the right of the FinishLynx hardware control screen.

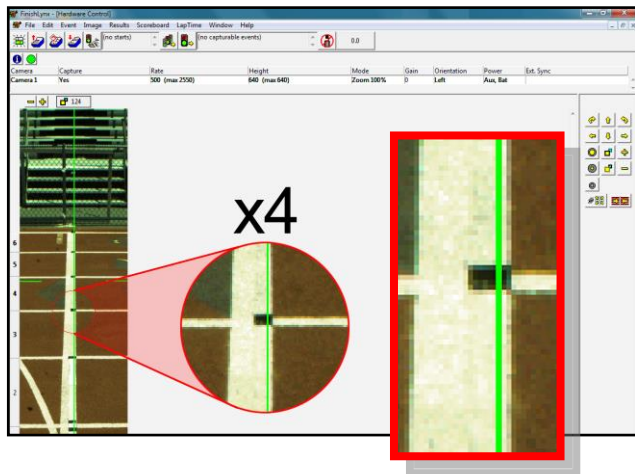


Center Remote Camera Positioner

Click  to center the camera automatically using the remote positioner.


Remote Camera Tilt, Pan & Swivel

Use the remote **Tilt**, **Pan**, and **Swivel** buttons to adjust the orientation of the camera on the finish. You want to ensure that the green vertical line is perfectly aligned on the white finish line and that all lanes are visible in the viewer.

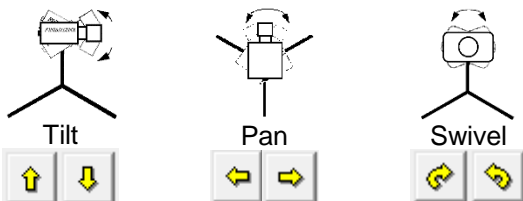

Have your assistant run through the finish line and watch where he/she appears on the computer monitor. The goal

Step 9: Adjust Primary Camera Settings

1. Click **Camera Settings Icon**  to open the Camera Settings dialog.
2. Select the **Setup** tab:

is for the runner's torso to be fully visible in both the inside and outside lanes. Once the camera's position is correct, you can then optimize the remote lens settings.



Remote Iris (adjusts amount of light in lens)





Open or Close the remote iris to bring the ACM value as close to 1 as you can by clicking and holding the remote Iris buttons.


Remote Focus (adjusts near/far image focus)




Click and hold the  and  buttons on the keypad on the right of the FinishLynx screen until the image becomes crisp. Start by focusing on the far lane and adjust until all lanes are in focus. Ensure that athletes in all lanes (near and far) are in focus.

Note: If you are having a hard time getting crisp focus, try opening your lens iris and allowing the AGC to drop closer to zero.

3. Once the camera appears to be aligned, **Click** the green alignment  icon to close 2D alignment and then click the red 1-D alignment icon . You will know when your camera is aligned on the finish line because the 1-D image will be primarily white. See image below for proper 1-D alignment. If you followed the steps closely in 2-D align, the camera should already be aligned in 1-D mode as well:

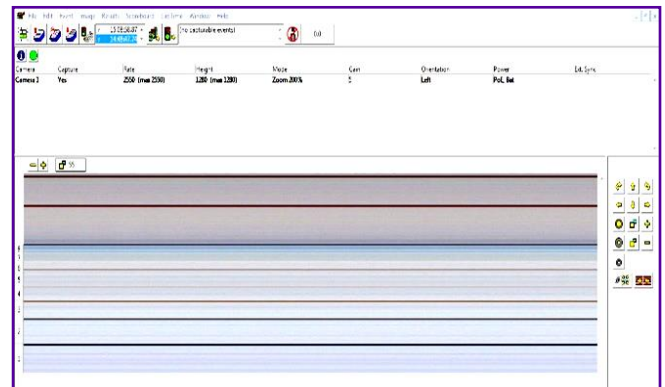

4. **Set White Balance**
 1. Right-click and draw a box around a small amount of the white image.
 2. Click . White balance is now set.

- a. **Name:** enter a name to identify the camera(s)
- b. **Image Orientation:** select the correct orientation for finish (infield would be Left orientation)
- c. **Identify By:** select Lane for track **competition**

- d. **Lanes:** enter the number of lanes on the track; the remaining should be left as default.
3. Select the **Inputs** tab:
 - a. **Start Sensor:** is defaulted to **Closed** for the wired gun start. If **using** RadioLynx, set **Start Sensor** to **None** to turn off the wired start (they are independent of each other).
 - b. **Photo Eye:** if **using** ACM to stop the scoreboard display, set it to **Internal**.
4. Select the **RadioLynx** tab:
 - a. **Port:** RadioLynx Port.
 - b. **Setup ID: should** be 000 and select Start Sensor on the next line, **Name:** will fill in automatically with Start 000.
5. Select the **Capture** tab:
 - a. **Capture Method:** select **Manual** if using the Capture Button or **Automatic** if using ACM plug-in (both **methods** can be active at the same time by selecting both).
6. Click **OK** to close the **Camera Settings** and it is advised to restart the FinishLynx software.

Step 10: Set Up Backup/Reverse Angle Camera

Repeat Step 1: through Step 8: for second Vision camera connected to a backup pc.

Step 11: Mount & Install IdentiLynx Camera

Follow the instructions in the separate [IdentiLynx QSG](#).

Step 12: Setup RadioLynx Wireless Start

Follow the instructions in the separate [Internal RadioLynx QSG](#).

Step 13: Set Up Lynx Infield Display

Follow the instructions in these separate documents:

1. [1-Sided Field Display Assembly Instructions](#)
2. [Installation of Foam Tape](#)
3. [Installation Instructions for 1-Sided Field Display](#)
4. [1-Sided LED Display - Electrical Setup](#)
5. [QSG - 1/2/3-Sided LED Video Infield Display](#)

Step 14: Set Up ResultV

Follow the instructions in the separate [ResultV QSG](#).

Step 15: Connect the Wind Gauge & Display

1. Connect the serial data cable supplied with the Wind Gauge to the DB9 port marked **Serial** on the SerialLynx unit.
 2. Connect an Ethernet cable between the Ethernet port on the SerialLynx unit and **Port 5** on your Hub
 3. Connect Wind Gauge 12v cables to the SerialLynx Battery Pack
 4. Connect the serial data cable supplied with the display to the DB9 port marked **Display** on the SerialLynx unit
 5. Open the FinishLynx software.
 6. Power on the wind display.
- NOTE:** If connecting either device to your computer using a USB to Serial Adapter, plug it into the USB port before booting FinishLynx software.

Step 16: Set Up Wind Gauge

1. In FinishLynx, go to **File | Options...** and select the **Wind** tab.
2. From the **Wind Module:** drop-down list, select **Lynx**
3. In the **Serial Port** drop-down list, select **Network (Connect)**
4. Enter the **Port** and **IP Address** settings that are on the label on your SerialLynx unit.
5. In the **Default Mode** drop-down list, select **100M**


Step 17: Configure Wind Display Settings

1. Select the **Scoreboard** tab from the options window.
2. Click on **New** to create a scoreboard or new scoreboard listing in the status window.
3. Click on the dropdown for **Script** and select the **Gill_E39860.Iss** from the list (alphabetical listing)
4. In the text box for **Name**, type in **Wind** (or anything to help you identify each board if there are multiple listings).
5. Code Set should be left as Single Byte.
6. In the Serial Port drop-down list, click to select Network (Connect)
7. Enter the Port and IP Address settings that refer to Display on the label on your SerialLynx unit.
8. For **Running Time** click the radio button for **Off**.
9. For **Results** select the following settings:
 - a. **Auto**
 - b. **Uncheck PAGING**
10. Click **OK** to close the Options window.
11. Close the FinishLynx program and re-start the software.
12. Press the **Wind** button on the Wind gauge remote.
13. Go to **File | Open** and select the Sprint.evt from the Lynx directory.
14. The wind value will appear on the display.

Step 18: Automatic Capture Module (ACM) Setup and Operation

A: Using ACM to Stop Running Time on a Display

The following information will help to set up the ACM feature for stopping or pausing the running time on a display with each race.


1. In the Hardware Control window, click on the **Camera Settings** .
2. In the Camera Settings, click on the **Inputs** tab and set **Photo Eye** to **Internal**.
3. Next, click on the **Capture** tab and set **Capture Method** to **Automatic**.
4. Click **OK** and close the Camera Settings.
5. Click **File | Options** then select the **Scoreboard** tab.
6. Confirm that the scoreboard is set up properly as shown above.

B: Manually Control ACM:



Step 19: Create a Shared Directory for FinishLynx and LynxPad

1. Right-click on your computer desktop and select **New | Folder**. When the **New Folder** appears, change the name to **Practice competition**.
2. In FinishLynx, click **File | Options....** Click the **Browse** button on the **Event Directory:** and navigate to the **Practice competition** directory you just created.
3. Still in FinishLynx, click the **Database** tab. Click the **Browse...** button next to the **Output Directory:** and navigate to the **Practice competition** directory. Then, click **Ok**.
4. Click the Windows **Start** button then **LynxPad**.
5. Click **File | Options...** and **uncheck** the **Load Existing Results on Program Start** box. Then, click **Ok**.
6. Open the sample competition by clicking **File | Open**. Navigate to **C:\LynxPadData\Sample** then double-click the **lynx.cmp** file. A practice competition opens on the screen.
7. Still in LynxPad, click **File | Options....** Click the **Browse** button next to the **Directory: text** field. Navigate to the **Practice competition** file you created earlier. Select it and click **Ok**. Click **Apply** and then click **Ok** again.
8. Still in LynxPad, click **File | Save as...** and navigate to the **Practice competition** folder. Then, click **Ok**. Now, FinishLynx can get start lists created in LynxPad, and LynxPad can import results generated by FinishLynx.

Step 20: Use FinishLynx with LynxPad Data

1. In FinishLynx, click  to load the schedule of events from LynxPad. The **Go To Event** dialog appears.
2. Click the **Load Schedule** button once. Click the drop-down list under the **Load Schedule** button. A list of events appears. Click to select the “**110 Meter Hurdles Men (9, 3, 1)**” event in the list, and then click **Ok**. The first heat of the third round of the men’s 110m hurdles opens on the FinishLynx screen.
3. Either use a starting gun, or tap your palm on the end of the sensor - this simulates the firing of the starting gun and starts the yellow FinishLynx timer.



4. Have your assistant run through the finish line while capturing them using either of the following methods:
 - a. If using manual capture, press down and hold the red capture button to capture the image. Release the button as soon as he/she has run completely through the finish line. Click the “automatically crop all blank areas” icon  to remove unnecessary image.
 - b. If using automatic capture mode, enable it by clicking the “turn capture on for the selected event” icon . Toggle the icon again after he/she has run completely through the finish line.

5. Practice evaluating the image by following the same steps you followed earlier in Step 1:
6. Click **File | Save** to save the race to the **Practice competition** directory.
7. Crop space between competitors in your FinishLynx image by right-clicking and drawing a box around the unwanted space. Release the mouse button and select **Crop** from the dialog that appears.
8. **(Optional)** Print the results and a portion of the FinishLynx image by right-clicking on the image and drawing a box around the portion you want to appear in your printout. For example, the first-place finisher or a close finish between two competitors. Click **Ok** and then select the printer from the **Print** dialog to send the image with results to the printer.
9. Click **File | Close window** and then click **Yes** to save changes you made to the FinishLynx image when you cropped it.
10. In LynxPad, click to highlight **Men 110 Meter Hurdles** in the **Events** window. The start list appears in the **Heats** window.
11. Still in LynxPad, click **Competition | Refresh All Results**. The results from the race you just evaluated appear in LynxPad.

Looking for more resources? Visit our YouTube Channel for setup and support videos:
www.youtube.com/finishlynx

Notes: